




## MASTERFLEX 610 application instructions

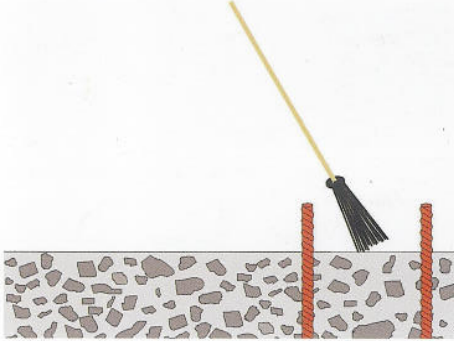


Clean surface from dust, dirt and loose particles.

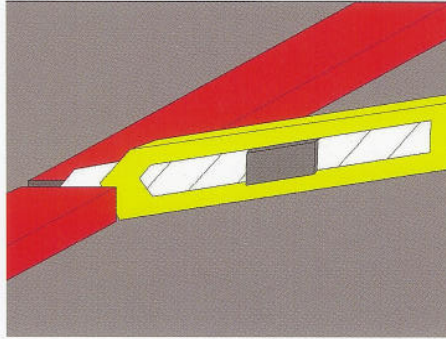


Cut the swelling gasket with knife to desired length.

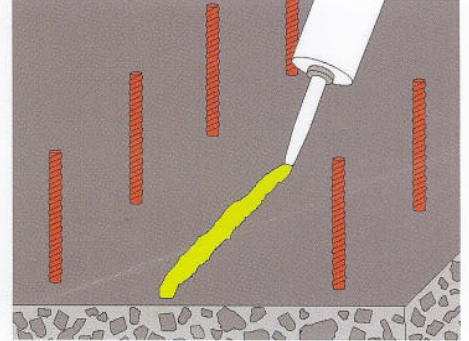


Apply adhesive to concrete or swelling gasket.

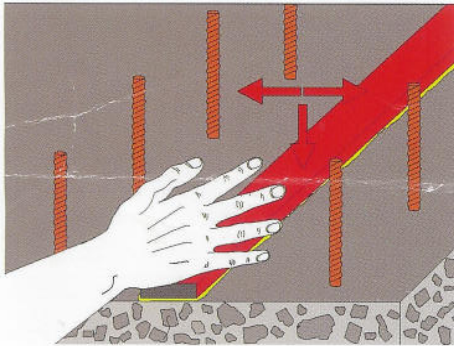


Press gasket evenly into the adhesive, DO NOT STRETCH.

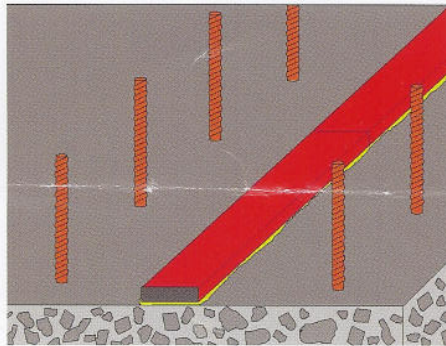


Butt joint for the connection of gaskets. Coverage min. 8 cm (3.15 inches)

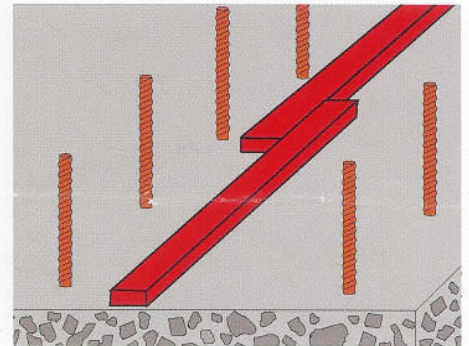


Overlapping joint for the connection gaskets. (Variation)

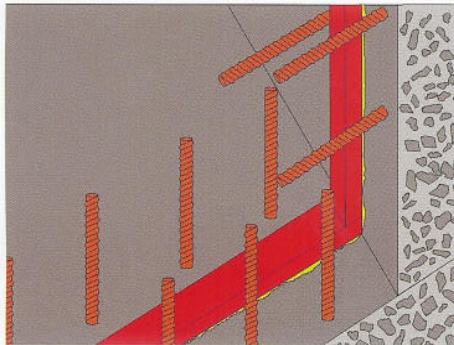

Corner joint horizontal/vertical.

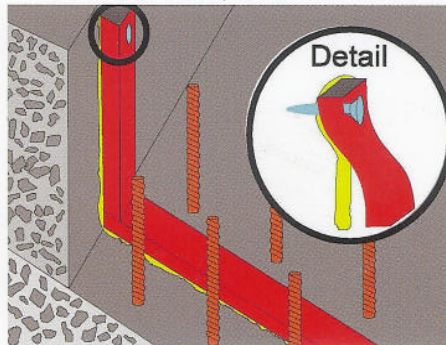

For vertical installation, apply swelling gasket with adhesive and use nail to hold until it dry. Remove nail after adhesive has set and cut away punctured gasket.

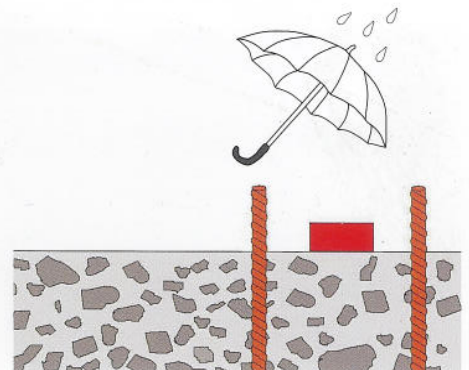

Protect swelling gasket from wet and dirt.